



CORE

sash windows

casements · doors




How to measure

1. Extend your measuring tape across the entire vertical length of the sash.

2. Extend your measuring tape across the entire horizontal length of the sash.

3. Record your measurements, email them to a member of the team and you're done!

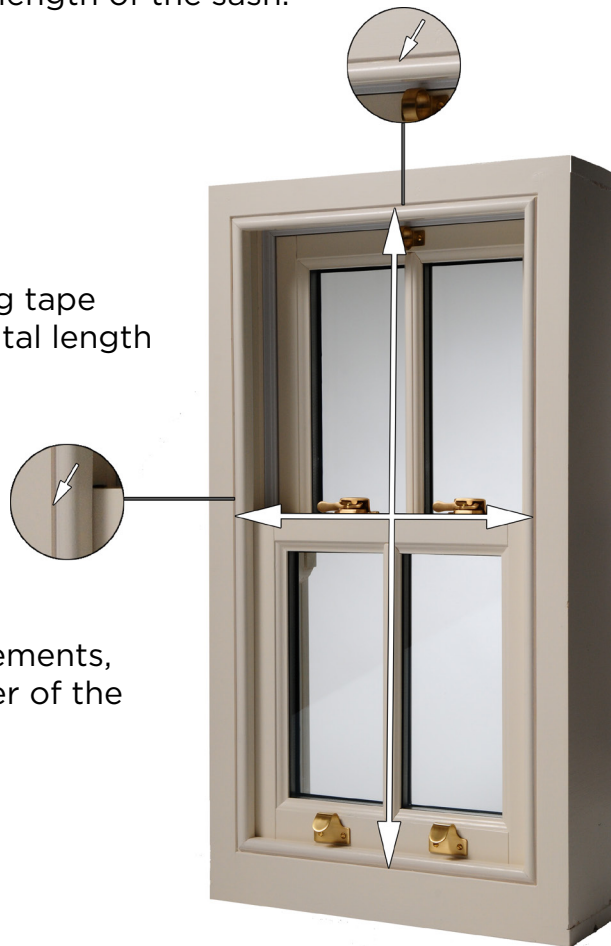

4. Please be aware these measurements are only accurate for sash replacements. If the box needs to be changed as well, you should add 135mm to the height and 150mm to the width for an accurate measurement.